

Solar Powered Wireless Wi-Fi Weather Station

Operation Manual

Table of Contents


1. Introduction	3
2. Warnings and Cautions	3
3. Quick Start Guide.....	3
4. Pre-Installation Checkout and Site Survey.....	3
4.1 Pre Installation Checkout.....	3
4.2 Site Survey	4
5. Getting Started.....	4
5.1 Parts List.....	4
5.2 Recommend Tools	5
5.3 Sensor Array Set Up.....	6
5.3.1 Install Wind Vane	7
5.3.2 Install Mounting Pole.....	7
5.3.3 Install Batteries	9
5.3.4 Mount Weather Station	10
5.3.5 Reset Button and Transmitter LED	11
5.4 Best Practices for Wireless Communication	错误! 未定义书签。
5.5 Display Console.....	错误! 未定义书签。
6. Display Console Operation.....	14
6.1 Screen Display.....	错误! 未定义书签。
6.2 Initial Display console Set Up.....	错误! 未定义书签。
6.3 Key function.....	错误! 未定义书签。
6.4 Set Mode	错误! 未定义书签。
6.4.1 Beep	19
6.4.2 MAX/MIN Daily.....	19
6.4.3 DST(daylight saving time).....	19
6.4.4 Time Zone.....	19
6.4.5 Time/Date	错误! 未定义书签。0
6.4.6 Pressure.....	错误! 未定义书签。
6.4.7 Light.....	错误! 未定义书签。
6.4.8 Temperature	错误! 未定义书签。
6.4.9 Wind speed.....	错误! 未定义书签。
6.4.10 Rain	错误! 未定义书签。
6.4.11 Moon phase	错误! 未定义书签。
6.5 Alarm Mode	错误! 未定义书签。
6.5.1 View Alarm Value.....	错误! 未定义书签。
6.5.2 Alarm mode setting	错误! 未定义书签。
6.5.3 Alarm Setting Order	错误! 未定义书签。
6.6 Max/Min mode	错误! 未定义书签。


6.7	Calibration Mode	25
6.8	Other Features.....	26
6.8.1	Factory Reset/Clear Memory.....	26
6.8.2	Register New Transmitter.....	27
6.8.2	Backlight Function	27
6.8.3	Tendency indicators.....	27
6.8.4	Strength Indicator	27
6.8.5	Weather forecast	27
6.8.6	Snooze	28
7.	Specification.....	29
8.	Live Internet Publishing	31
8.1.	Connecting the Weather Station Console to WiFi	31
9.	Registering with WeatherUnderground.com, WeatherBug.com and WeatherCloud.net	35

1. Introduction

Thank you for your purchase of the Solar Powered Wireless WiFi Weather Station. The following user guide provides step by step instructions for installation, operation and troubleshooting.

2. Warnings and Cautions

 **Warning:** Any metal object may attract a lightning strike, including your weather station mounting pole. Never install the weather station in a storm.

 **Warning:** Installing your weather station in a high location may result in injury or death. Perform as much of the initial check out and operation on the ground and inside a building or home. Only install the weather station on a clear, dry day.

3. Quick Start Guide

Although the manual is comprehensive, much of the information contained may be intuitive. In addition, the manual does not flow properly because the sections are organized by components.

The following Quick Start Guide provides only the necessary steps to install, operate the weather station, and upload to the internet, along with references to the pertinent sections.

Required		
Step	Description	Section
1	Assemble and power up the sensor array	0 - 0
2	Power up the display console and synchronize with sensor array	错误! 未找到引用源。
5	Mount the sensor array	0
3	Set date and time on console	错误! 未找到引用源。
4	Calibrate the relative pressure to sea-level conditions (local airport) on console	错误! 未找到引用源。
6	Reset the rain to zero on console	错误! 未找到引用源。
Optional		
7	Configure WiFi	错误! 未找到引用源。
8	Register and upload to Weather Server	错误! 未找到引用源。

4. Pre-Installation Checkout and Site Survey

4.1 Pre Installation Checkout

Before installing your weather station in the permanent location, we recommend operating the weather station for one week in a temporary location with easy access. This will allow you to check out all of the functions, insure proper operation, and familiarize you with the weather station and calibration procedures. This will also allow you to test the wireless range of the weather station.

4.2 Site Survey

Perform a site survey before installing the weather station. Consider the following:







1. You must clean the rain gauge every few months and change the rechargeable batteries every 2-3 years. Provide easy access to the weather station.
2. Avoid radiant heat transfer from buildings and structures. In general, install the sensor array at least 5' from any building, structure, ground, or roof top.
3. Avoid wind and rain obstructions. The rule of thumb is to install the sensor array at least four times the distance of the height of the tallest obstruction. For example, if the building is 20' tall, and the mounting pole is 6' tall, install $4 \times (20 - 6) = 56'$ away.
4. Wireless Range. The radio communication between receiver and transmitter in an open field can reach a distance of up to 330 feet, providing there are no interfering obstacles such as buildings, trees, vehicles, high voltage lines. Wireless signals will not penetrate metal buildings. Under most conditions, the maximum wireless range is 100'.
5. Radio interference such as PCs, radios or TV sets can, in the worst case, entirely cut off radio communication. Please take this into consideration when choosing console or mounting


locations. Make sure your display console is at least five feet away from any electronic device to avoid interference.

5. Getting Started

The WS-1000-WiFi weather station consists of a display console (receiver), an all in one sensor array, and wireless thermo-hygrometer-barometer.

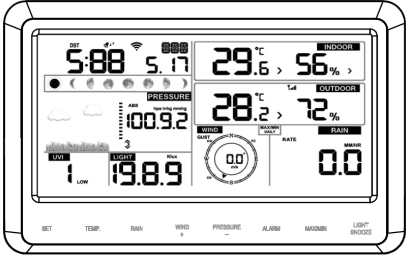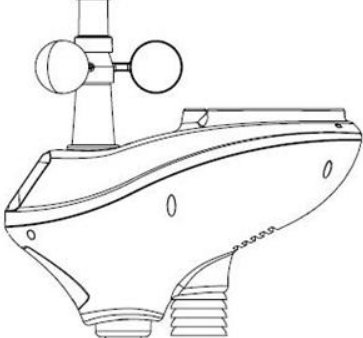5.1 Parts List

QTY	Item	Image
1	Display Console Frame Dimensions (LxWxH): 18.7x11.5x1.9cm (7.35 x 4.5 x 0.75") LCD Dimensions (LxW): 15.6x 7.6cm (6.2 x 3")	
1	Sensor Array	
1	Wind Vane	
1	5V DC Adaptor	
2	Pole	
2	Pole mounting U-bolt	

QTY	Item	Image
4	Pole mounting clamps	
4	Pole mounting U-bolt nuts	
1	Allen wrench	
1	User manual	

5.2 Recommend Tools

- Precision screwdriver (for small Phillips screw on battery cover door)
- Adjustable wrench (for mounting pole)
- Compass or GPS (for wind direction calibration)

5.3 Sensor Array Set Up

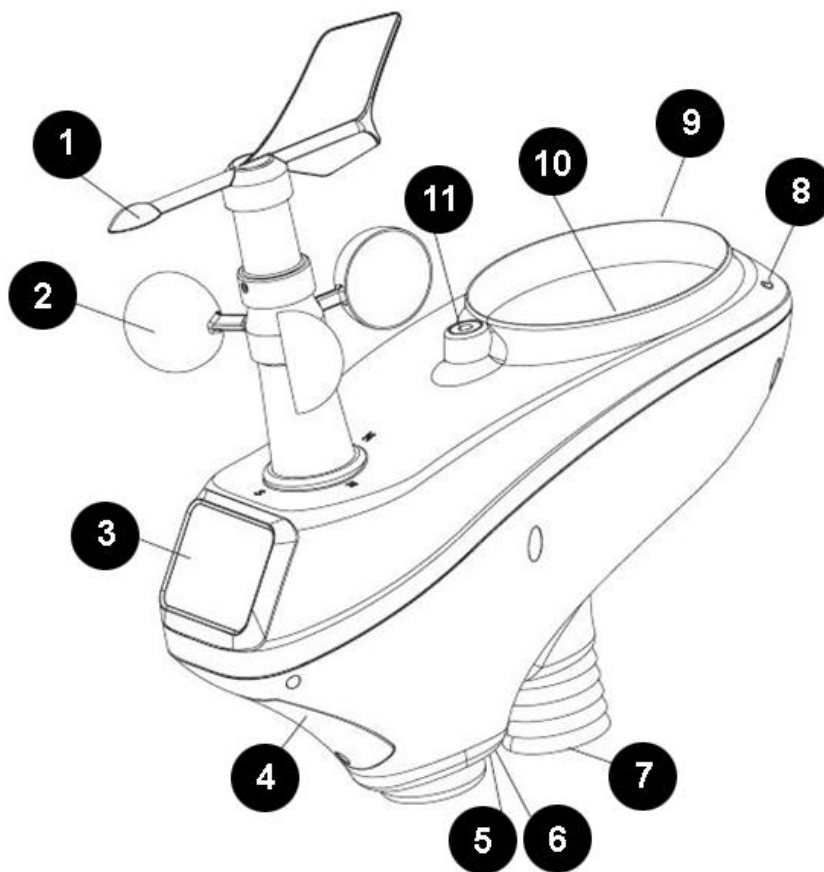



Figure 1

No	Description	No	Description
1	Wind Vane (measures wind direction)	7	Thermo-hygrometer Sensor (measures temperature and humidity)


2	Wind Speed Sensor (measures wind speed)	8	UV Sensor
3	Solar collector	9	Solar Radiation Sensor
4	Rechargeable battery compartment	10	Rain Collector (self emptying)
5	LED transmission indicator (turns on for 4 seconds on power up, flashes once per 16 seconds)	11	Bubble Level
6	Reset button		

5.3.1 Install Wind Vane

Reference Figure 2. (a) Locate and align the flat key on the wind vane shaft to the flat key on the wind vane and push the vane on to the shaft. (b) tighten the set screw with the hex wrench (included).

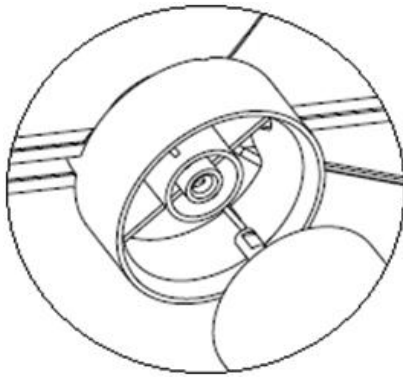

(a)

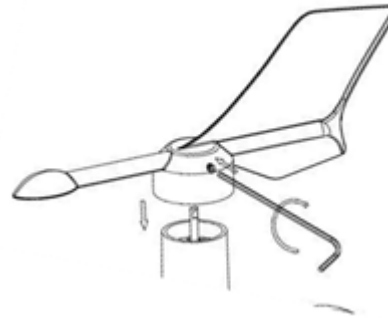

(b)

Figure 2

5.3.2 Install Mounting Pole

Reference Figure 3. Remove the mounting pole collar by rotating counter clockwise.

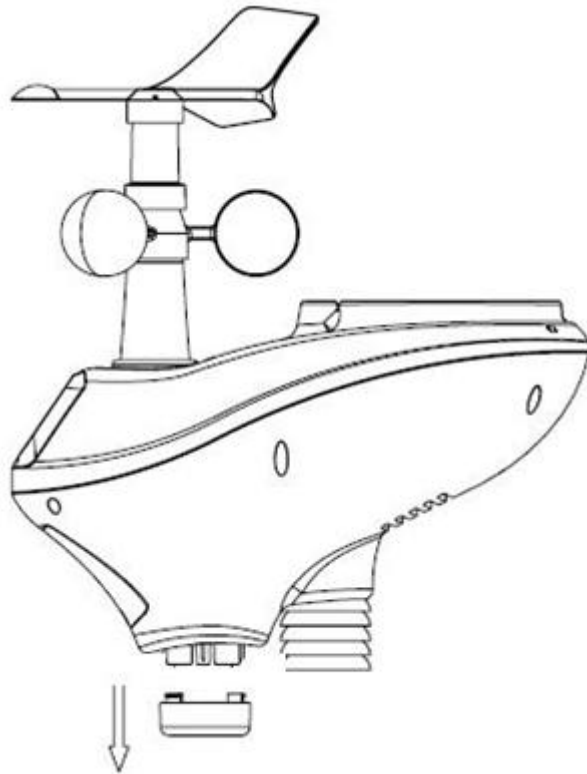


Figure 3

Reference Figure 4. Locate and align the groove on the sensor array and mounting pole.

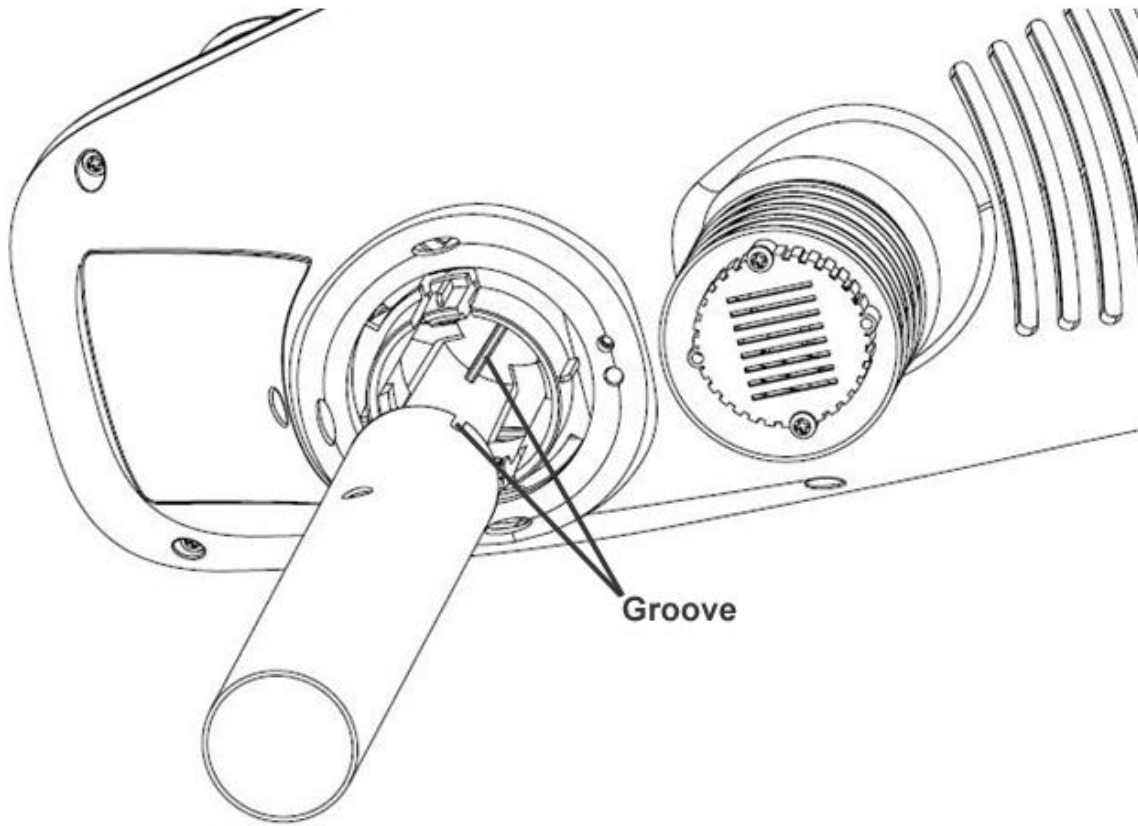


Figure 4

Reference Figure 5. Turn the mounting pole collar to lock the pole into place by rotating clockwise.

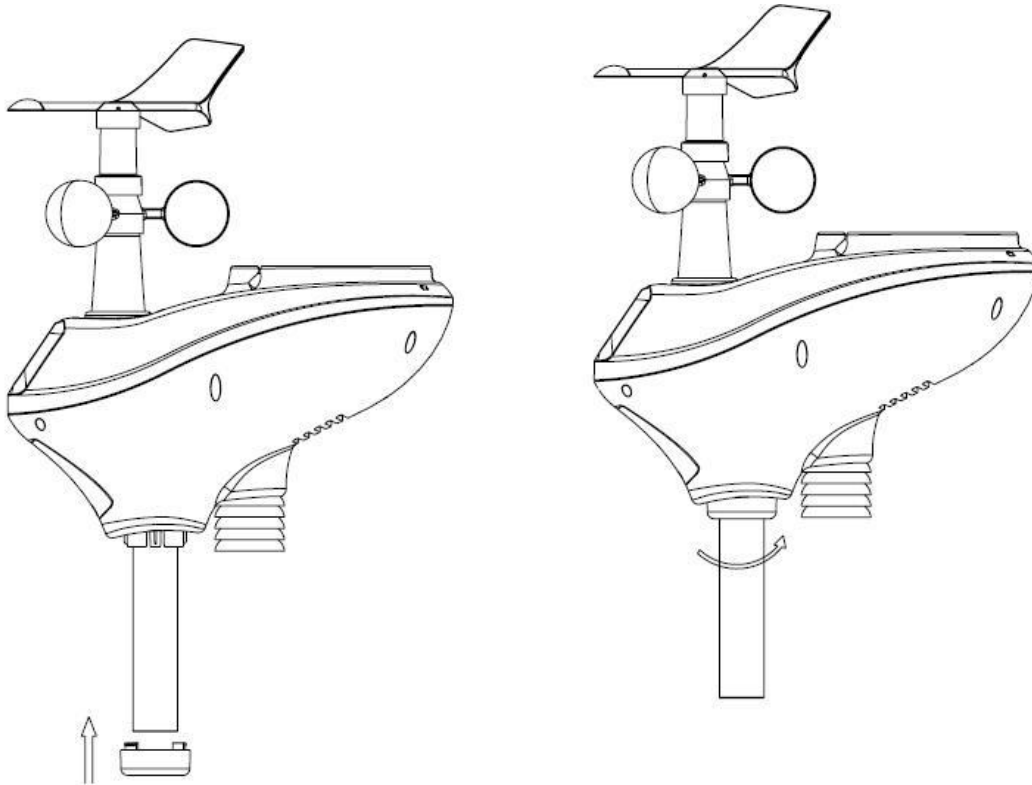


Figure 5

5.3.3 Install Batteries

Reference Figure 6. Locate the battery door on the bottom of the sensor array. Turn the set screw counter clockwise to open the battery compartment. Insert the 3xAA rechargeable batteries (included). The LED indicator on the bottom of the sensor array will turn on for four seconds and normally flash once per 16 seconds (the transmission update period).

Close the battery door and tighten the set screw.

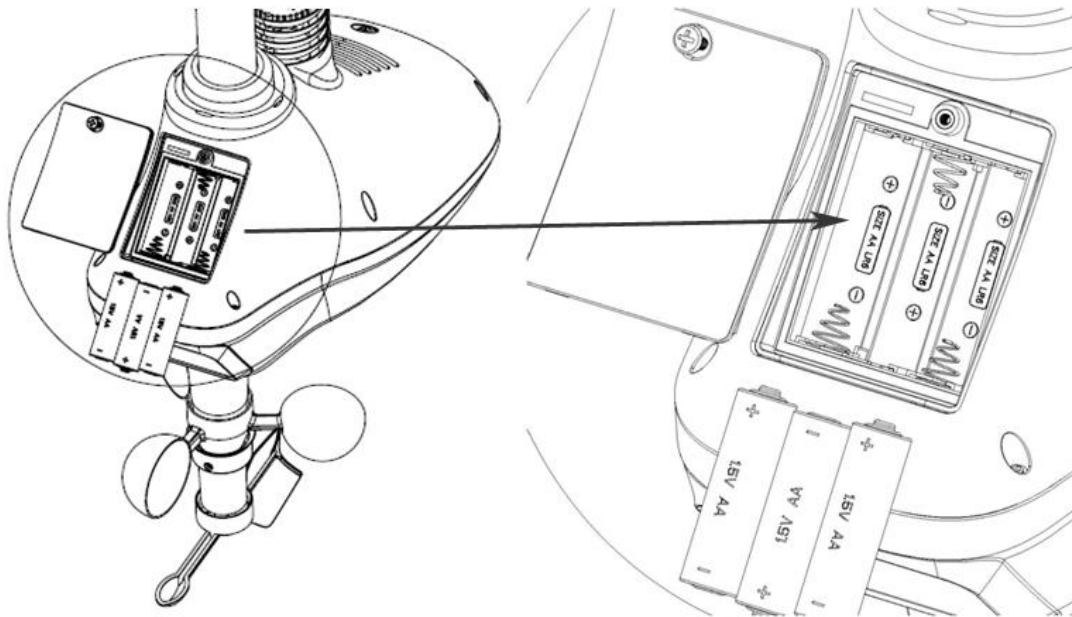


Figure 6

5.3.4 Mount Weather Station

Fasten the mounting pole to your mounting pole or bracket (purchased separately) with the U-bolts, mounting pole brackets and nuts, as shown in Figure 7. Tighten the mounting pole to your mounting pole with the U-Bolt assembly. Make sure your mounting pole is as far away from the temperature sensor as possible, as shown in Figure 7.

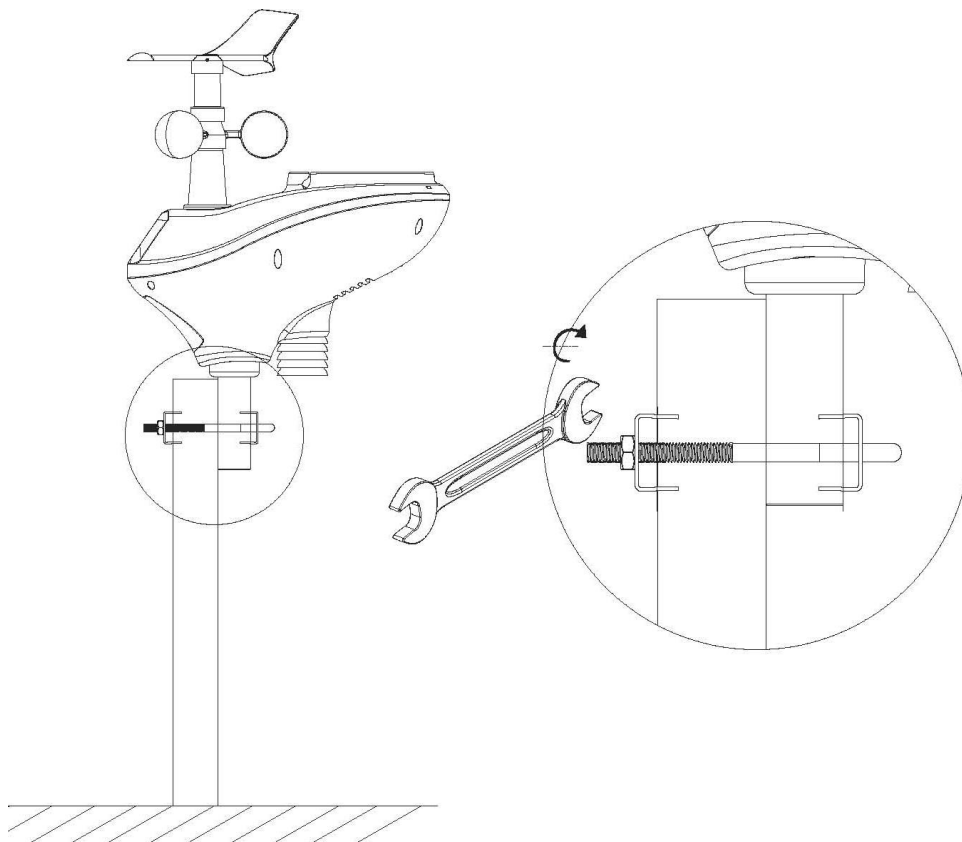


Figure 7

1. Reference Figure . Locate the four wind vane compass rose indicators of N, E, S, W (representing North, East, South and West). Align the compass rose direction upon final installation with a compass or GPS.

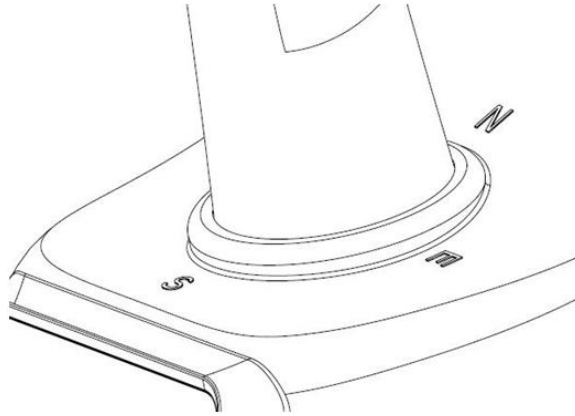


Figure 8

2. Reference Figure . Make sure the sensor array is completely level upon final installation. Failure to do so will result in inaccurate rain gauge readings.

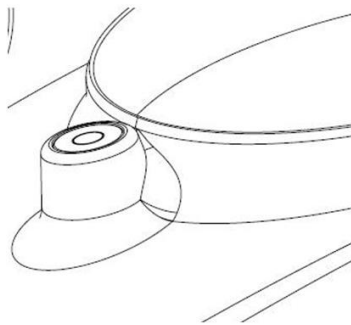


Figure 9

5.3.5 Reset Button and Transmitter LED

In the event the sensor array is not transmitting, reset the sensor array.

With an open ended paperclip, press and hold the **RESET BUTTON** for three seconds to completely discharge the voltage.

Take out the batteries and wait one minute, while covering the solar panel to drain the voltage.

Put batteries back in and resynchronize with console by powering down and up the console with the sensor array about 10 feet away.

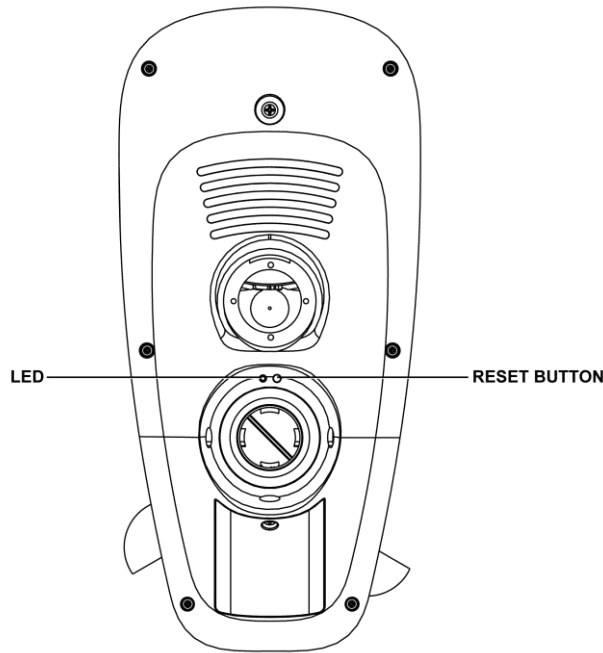



Figure 10

5.4 Best Practices for Wireless Communication

 **Note:** To insure proper communication, mount the remote sensor(s) upright on a vertical surface, such as a wall. **Do not lay the sensor flat.**

Wireless communication is susceptible to interference, distance, walls and metal barriers. We recommend the following best practices for trouble free wireless communication.

1. **Electro-Magnetic Interference (EMI).** Keep the console several feet away from computer monitors and TVs.
2. **Radio Frequency Interference (RFI).** If you have other 433 MHz devices and communication is intermittent, try turning off these other devices for troubleshooting purposes. You may need to relocate the transmitters or receivers to avoid intermittent communication.
3. **Line of Sight Rating.** This device is rated at 300 feet line of sight (no interference, barriers or walls) but typically you will get 100 feet maximum under most real-world installations, which include passing through barriers or walls.
4. **Metal Barriers.** Radio frequency will not pass through metal barriers such as aluminum siding. If you have metal siding, align the remote and console through a window to get a clear line of sight.

The following is a table of reception loss vs. the transmission medium. Each “wall” or obstruction decreases the transmission range by the factor shown below.

Medium	RF Signal Strength Reduction
--------	------------------------------

Glass (untreated)	5-15%
Plastics	10-15%
Wood	10-40%
Brick	10-40%
Concrete	40-80%
Metal	90-100%

5.5 Display console

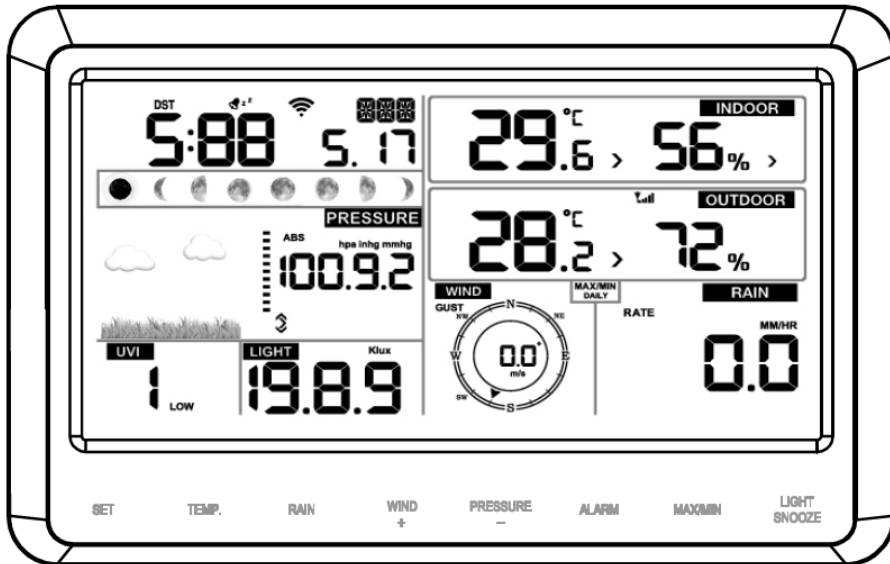
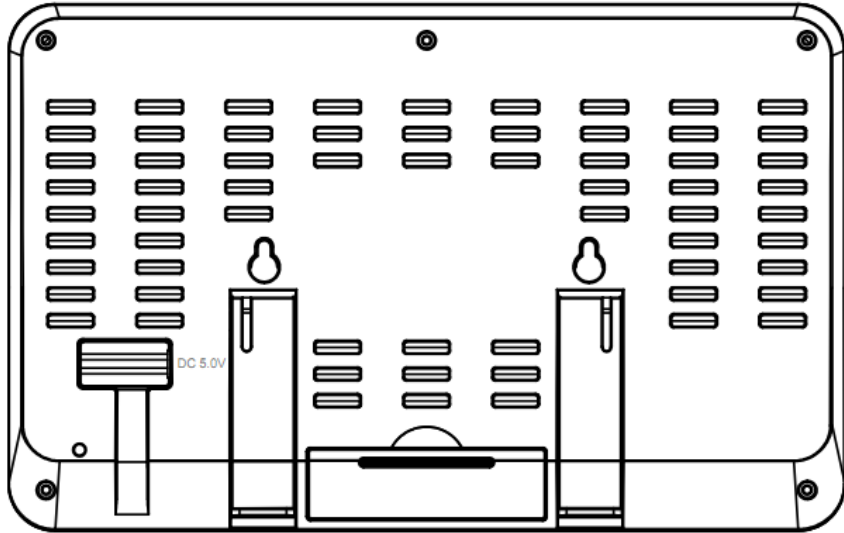


Figure 11

1. Insert the 5V AC adaptor into the back of the display console

Note: Place the outdoor sensor array about 5 to 10 feet from the display console and wait several minutes for the remote sensors to synchronize with the display console.


2. Insert 3 AAA batteries into the display console (optional).
Note: The batteries are intended for back-up power only. The backlight will remain on for 5 seconds when on back up battery power only. Only when you use power adapter it will the back-light be continuously on.
3. Keep both sensor and the display console together for 15 minutes to lock in the sensor signals.
4. (Optional)-Spin the wind cups to simulate wind speed. Take the sensor to the sink and slowly drip water into the rain bucket to simulate rain.
5. After 15 minutes, follow the mounting instructions for proper placement of sensors.

Note: Your display console should have readings in all sections. Wind and Rain will show 0's (connected) until wind or rain occur or are simulated.

Note: If you only use battery to power up display console, you must press LIGHT/SNOOZE key to light up the LCD before press any other key.

6. Display Console Operation

6.1. Screen Display

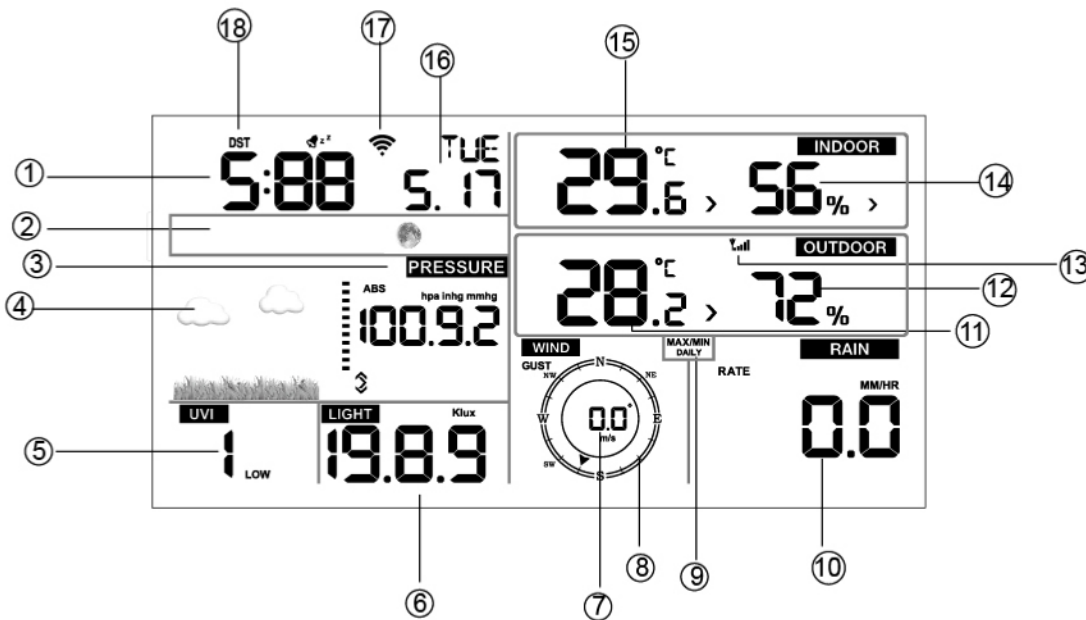

1. Time	10. Rain fall
2. Moon phase	11. Outdoor temperature
3. Barometric Pressure	12. Outdoor humidity
4. Weather forecast	13. RF icon

5. UV index	14. Indoor humidity
6. Light	15. Indoor temperature
7. Wind speed	16. Date
8. Wind direction	17. WIFI icon
9. MAX/MIN Daily	18. DST

Figure 12

6.2. Initial Display Console Set Up


Note: The sensor array must be powered and updating before powering up the console, or the console will timeout searching for the sensors. Perform this step last.

Make certain the weather station sensor array is at least 3m from the console and within 100m of the console. If the weather station is too close or too far away, it will not receive a proper signal.


1. Insert the power adapter into the power jack of the console, and plug in the adapter. The LCD display will beep once and then light up. The unit will show software version number 2 seconds after power reset.




Then the unit will turn on all segments of the LCD for 3 seconds, the unit will start to register the outdoor channel for 3 minutes.

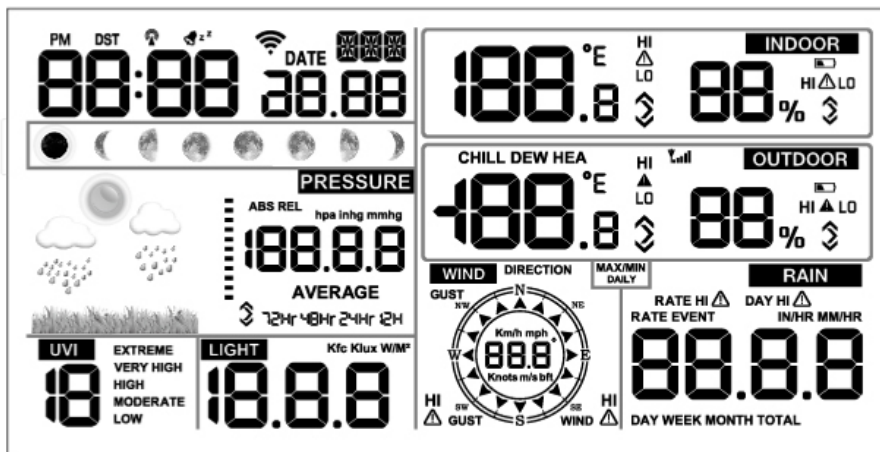

2. Remove the battery door on the back of the display. Insert three AAA (alkaline or lithium, avoid rechargeable) batteries in the back of the display console. Looking at the back of the unit (left to right), the polarity is (+) (-) for the top battery, (-) (+) for the middle battery and (+) (-) for the bottom battery.

 **Note:** To avoid permanent damage, please take note of the battery polarity before inserting the batteries.

- Replace the battery door, and fold out the desk stand and place the console in the upright position.

 **Note:** The batteries are intended for back-up power only. The backlight will remain on for 5 seconds when on back up battery power only. Only when you use power adapter it will the back-light be continuously on.

- After initialization, the console will instantly display indoor temperature, humidity, barometer, tendency, date and time. The wind speed, wind direction, rain, and outdoor temperature and humidity will update on the display within a few minutes. The remote search icon will turn




Do not touch any buttons until the remote sensor reports in, otherwise the remote sensor search mode will be terminated and the search icon will turn off. When the remote sensor data has been received, the console will automatically switch to the normal mode, and all further settings can be performed.

If it does not update, please reference the troubleshooting guide in Section [错误!未找到引用源。](#).

6.3 Key function

The console has eight keys for easy operation

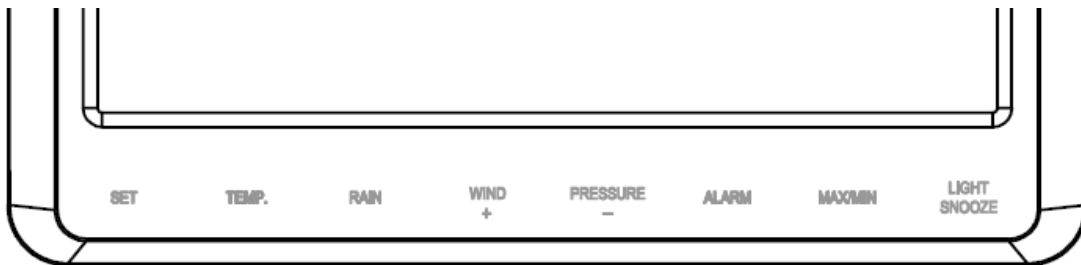

Key	Description
SET	Hold this key to enter setting mode
TEMP.	Press this key to view wind Chill, Heat Index, Dew Point Temperature Press the TEMP key 5s, will register new transmitter.
RAIN	Press this key to view Rain Rate, event, Rain Day, Rain Week, Rain Month, and Rain total* Press the RAIN key 2s to reset current display rain*
WIND/ +	Press this key to view wind/gust and wind direction In Setting mode, pressing WIND/+ key select the unit or scrolls the value; keeping press and holding WIND/+ key for 2 second will increase/decrease digits in great steps.

PRESSURE/-	Press this key to view Absolute Pressure average of 12hr, 24hr, 48hr and 72hr Press and hold 2s this key to view the absolute and relative pressure In Setting mode, pressing WIND/+ key select the unit or scrolls the value; keeping press and holding WIND/+ key for 2 second will increase/decrease digits in great steps.
ALARM	Press this key to view the alarm value of Temperature / Humidity/rain rate/rain day/wind
MAX/MIN	Press this key to view the MAX/MIN value of Temperature / Humidity/rain rate/rain day/wind/UVI/LIGHT/Absolute Pressure
LIGHT /SNOOZE	Press this key to adjust LCD backlight brightness: HI/MID/OFF

Figure 13

*Rainfall Readings

Press RAIN key to view rain history:

- Rain rate: it forecast the rain per hour base on the recently 10 minute's rainfall. For example: the rainfall of recent 10 minutes is 12mm, the rain/hour is $12\text{mm} \times 6 = 72\text{mm/h}$.
- Rain event: It start to record the rain event value form the rain falls, the rain event is over and value reset to 0 if last 24 hour rainfall less 1mm and the last 1 hour no rainfall.
- Day: 24 hr period from 0:00 - 24:00.
- Week: defined by calendar week i.e. Sunday – Saturday.
- Month: defined by calendar Month i.e. January 1 - January 31.
- Total: running total since station was powered up

*Reset Rainfall History:

- Reset week rain, will auto reset day rain
- Reset month rain, will auto reset week and day rain.
- Reset total rain, will auto reset month, week and day rain.

□

Note:

- 1) When power on, press **WIND/+** and **PRESSURE /-** key to reset the weather station and clear all records memory, and clears all user settings to default.
- 2) When power on, press **TEMP.** key to skip receive RF signal.
- 3) The setting procedure can be exited at any time by either pressing the **LIGHT /SNOOZE** key or waiting for the 30-second time-out to take effect.

6.4 Set mode

The Set Mode allows you to change date, time, units of measure and other important functions, as referenced in Figure 14Figure .

To enter the Set Mode, press and hold the **SET** key for two seconds (**SET** + 2 seconds). To

advance each command, press (do not hold) the **SET** key.

Command	Function	Description	Settings
SET + 2 seconds	BEEP	Turns on or off the beep with each keystroke	Press WIND/+ or PRSSURE/- to toggle OFF and ON
SET	RST	Reset max/min daily at 12:00am (on) or manually (off)	Press WIND/+ or PRSSURE/- to toggle OFF and ON
SET	DST	Observe Daylight Savings Time	Press WIND/+ or PRSSURE/- to toggle OFF and ON
SET	ZON	Time Zone (TZ)	Press WIND/+ to increase or PRSSURE/- to decrease (reference Figure 15).
SET	24H	12/24 Hour Format	Press WIND/+ or PRSSURE/- to toggle between 12 hour (12h) and 24 hour (24h) format
SET	HR	Hour of Day	Press WIND/+ to increase. PRSSURE/- to decrease
SET	MIN	Minute of Day	Press WIND/+ to increase. PRSSURE/- to decrease
SET	M-D	Month Day Format	Press WIND/+ or PRSSURE/- to toggle between M-D (month/day) format and D-M (day/month) format
SET	Y	Year	Press WIND/+ to increase and PRSSURE/- to decrease
SET	M	Month of Year	Press WIND/+ to increase and PRSSURE/- to decrease
SET	D	Day of Month	Press WIND/+ to increase and PRSSURE/- to decrease
SET	hPa	Barometric Pressure Units of Measure	Press WIND/+ to toggle between inHg,mmhg and hPa
SET	PRESSURE REL	Relative Pressure Calibration	Press WIND/+ to increase. PRSSURE/- to decrease. For details on relative barometric pressure calibration, reference Section 错误! 未找到引用源。
SET	W/M ²	Light units of Measure	Press WIND/+ to toggle between klux, kfc, and W/M ²
SET	°C	Temperature Units of Measure	Press WIND/+ to toggle between °F and °C
SET	Km/h	Wind speed units of Measure	Press WIND/+ to toggle between km/h, mph, knots, m/s and bft

SET	Mm	Rainfall units of Measure	Press WIND/+ to toggle between mm and inch
SET	NTH	Northern Hemisphere (NTH) or southern Hemisphere (STH) select	Press WIND/+ to toggle between Northern and southern Hemisphere
SET		Exit Set Mode	

Figure 14

6.4.1 BEEP:



- Press the **SET** key for 2 seconds to select the beep section, ON/OFF section digits will start flashing, press the **WIND/+** or **PRSSURE/-** key to select ON or OFF.

6.4.2 MAX/MIN Daily:



- Press the **SET** key twice to select the **MAX/MIN Daily** section, ON/OFF section digits will start flashing. Press the **WIND/+** or **PRSSURE/-** key to select ON or OFF . (Default ON. ON: Reset max/min daily at 12:00am).

6.4.3 DST(daylight saving time):



- Press the **SET** key third time to select the **Daylight saving time** section, ON/OFF section digits will start flashing,press the **WIND/+** or **PRSSURE/-** key to select ON or OFF . (default ON)

Note: DST time start at 1:00am GMT of the last Sunday in March and end at 1:00am GMT of the last Sunday in October.

6.4.4 Time zone




- Press the **SET** key forth time to select the **Time zone** section, time zone section digits will start flashing. Press the **WIND/+** or **PRSSURE/-** key to select the value . (-12 to +12, default: 1)

Hours from GMT	Time Zone	Cities
-12	IDLW: International Date Line West	---
-11	NT: Nome	Nome, AK
-10	AHST: Alaska-Hawaii Standard CAT: Central Alaska HST: Hawaii Standard	Honolulu, HI
-9	YST: Yukon Standard	Yukon Territory
-8	PST: Pacific Standard	Los Angeles, CA, USA
-7	MST: Mountain Standard	Denver, CO, USA
-6	CST: Central Standard	Chicago, IL, USA
-5	EST: Eastern Standard	New York, NY, USA
-4	AST: Atlantic Standard	Caracas
-3	---	S ão Paulo, Brazil
-2	AT: Azores	Azores, Cape Verde Islands
-1	WAT: West Africa	---
0	GMT: Greenwich Mean WET: Western European	London, England
1	CET: Central European	Paris, France
2	EET: Eastern European	Athens, Greece
3	BT: Baghdad	Moscow, Russia
4	---	Abu Dhabi, UAE
5	---	Tashkent
6	---	Astana
7	---	Bangkok
8	CCT: China Coast	Beijing
9	JST: Japan Standard	Tokyo
10	GST: Guam Standard	Sydney
11	---	Magadan
12	IDLE: International Date Line East NZST: New Zealand Standard	Wellington, New Zealand

Figure 15

6.4.5 Time / Date

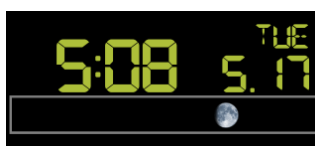

- Press the **SET** key fifth time to select the 12/24 hour format section (default: 24hr).
- Press the **SET** key sixth time to select the hour section.
- Press the **SET** key seventh time to select the minutes section.

- Press the **SET** key eighth time to select DD-MM or MM-DD format. (Default DD-MM format)
- Press the **SET** key ninth time to select year.
- Press the **SET** key tenth time to select month.
- Press the **SET** key again time to select day.

Note: Press the **WIND/+** or **PRSSURE/-** key to set the value.

Note: If user to change minute value, second will auto clear to 0.

6.4.6 Pressure




- Press the **SET** key 12th to select Pressure unit (hPa, mmHg or inHg; default: hpa).
- Press the **SET** key 13th to select REL. Pressure value.

Note: Press the **WIND/+** or **PRSSURE/-** key to select the value.

Note: In normal mode, press and release the **PRSSURE/-** key to view the average of 12hr, 24hr, 48hr and 72hr pressure. Press and hold 2s the **PRSSURE/-** key to view the absolute and relative pressure

6.4.7 Light

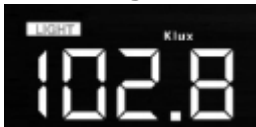

- Press the **SET** key 14th to select light unit (klux, kfc, w/m2; default: w/m2).

6.4.8 Temperature




- Press the **SET** key 15th to select in/outdoor temperature unit (C or F;default: C).
- In normal model, press the **TEMP.** key to view wind Chill, Heat Index, Dew Point Temperature. Press the **TEMP.** key for 5 second, will register new transmitter.

6.4.9 Wind speed



- Press the **SET** key 16th to select wind speed unit (km/h, mph, knots, m/s, bft; default: km/h).
- In normal mode, press and release the **WIND/+** key to view the wind, gust and wind direction.

6.4.10 Rain

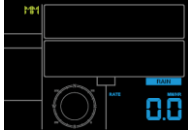

- Press the **SET** key 17th to select rainfall unit (in or mm; default: mm).
- In normal mode, press and release the RAIN key to view rain of rate, event, day, week, month and total.
- Press the **RAIN** key for 2 seconds to reset current display rain.

*Rainfall Readings

- Rain rate: it forecast the rain per hour base on the recently 10 minute's rainfall. For example: the rainfall of recent 10 minutes is 12mm, the rain/hour is $12\text{mm} \times 6 = 72\text{mm/h}$.
- Rain event: It start to record the rain event value form the rain falls, the rain event is over and value reset to 0 if last 24 hour rainfall less 10mm and the last 1 hour no rainfall.
- Day: 24 hr period from 0:00 - 24:00.
- Week: defined by calendar week i.e. Sunday – Saturday.
- Month: defined by calendar Month i.e. January 1 - January 31.
- Total: running total since station was powered up

*Reset Rainfall History:

- Reset week rain, will auto reset day rain
- Reset month rain, will auto reset week and day rain.
- Reset total rain, will auto reset month, week and day rain.

6.4.11 Moon phase




- Press the **SET** key 18th to Northern or Southern Hemisphere select.

6.5 Alarm mode

6.5.1 View Alarm value

Press and release **ALARM** key to display high alarm, Press **ALARM** key again to display low alarm. Press **ALARM** key third time or press **LIGHT /SNOOZE** key return to normal mode.

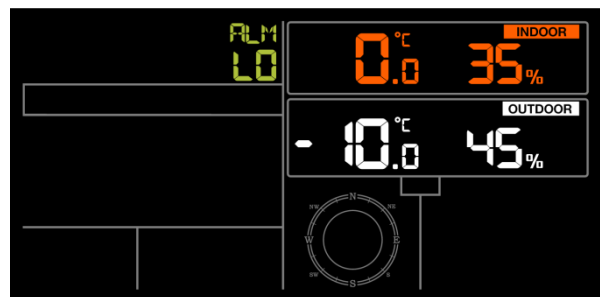


In alarm mode:

- Press **RAIN** key to shift display rain rate or day rain alarm data.
- Press **WIND/+**key to shift display wind or gust alarm data.


6.5.2 Alarm setting mode:

Hold the **ALARM** key for 2 seconds to enter alarm setting mode:


1. **Time of Day Alarm.** The hour will begin flashing. Press the **WIND/+** or **PRESSURE/-** key to change the hour value. Press the **SET** key to set the minute value. The minute will begin flashing. Press the **WIND/+** or **PRESSURE/-** key to increase or decrease the minute value.

Press the ALARM key to turn the alarm on or off (if the alarm is enabled, the alarm icon  will be turned on).




2. **Indoor Temperature High Alarm.** Press the SET key to set the indoor temperature high alarm. The indoor temperature will begin flashing. Press the **WIND/+** or **PRESSURE/-** key to change the indoor temperature alarm value.

Press the ALARM key to turn the alarm on or off (if the alarm is enabled, the alarm icon  will be turned on).

3. **Indoor Temperature Low Alarm.** Press the SET key to set the indoor temperature low alarm. The indoor temperature will begin flashing. Press the **WIND/+** or **PRESSURE/-** key to change the indoor temperature alarm value.

Press the ALARM key to turn the alarm on or off (if the alarm is enabled, the alarm icon  will be turned on).

4. **Indoor Humidity High Alarm.**
5. **Indoor Humidity Low Alarm.**
6. **Outdoor Temperature High Alarm.**
7. **Outdoor Temperature Low Alarm.**
8. **Outdoor Humidity High Alarm.**
9. **Outdoor Humidity Low Alarm**
10. **Wind High Alarm**
11. **Wing gust High Alarm**
12. **Rain rate high Alarm**
13. **Rain day high Alarm**
14. Press the **WIND/+** or **PRESSURE/-** to adjust alarm values.
15. Press the **SET** key to confirm & move to the next item.
16. Press the **ALARM** key to on/off the alarm

Note: when alert is triggered, the current triggering source  icon for time,  icon for high value and  icon for low value will be flashing, indicating alert is triggered.

Note: press **ALARM** key third time back to normal mode or press **LIGHT /SNOOZE** key back to normal mode.

When a weather alarm condition has been triggered, the alarm will sound for 120 seconds and the corresponding icon will flash until the weather condition is no longer present. Press any key to mute the alarm.

You can also set a time of day alarm using the same method.

6.5.3 Alarm Setting Order:

- 1) Time alarm setting
- 2) Indoor high temperature setting
- 3) Indoor low temperature setting
- 4) Indoor high humidity setting
- 5) Indoor low humidity setting
- 6) Outdoor high temperature setting
- 7) Outdoor low temperature setting
- 8) Outdoor high humidity setting
- 9) Outdoor low humidity setting
- 10) High wind setting
- 11) High gust setting
- 12) Rain rate high setting
- 13) Rain day high setting

6.6 Max/min mode

6.6.1 Press and release **MAX/MIN** key to display MAX data



- Press **TEMP.** key to view wind chill, heat index and dew point max.
- Press **RAIN** key to view rain rate, rain day, rain week and rain month max.
- Press **WIND/+** to view wind and gust max.
- Press **PRESSURE/-** to hold 2 seconds to view pressure absolute and relative max.

6.6.2 Press again to display min data



- Press **TEMP.** key to view wind chill and dew point min.
- Press **PRESSURE**/-to hold 2 seconds to view pressure absolute and relative min.

Note: press and hold 2s MAX/MIN button to reset all max or min.

press **MAX/MIN** key third time back to normal mode or press **LIGHT /SNOOZE** key back to normal mode.

6.7 Calibration mode

Hold the **TEMP.** and **MAX/MIN** key together for 5 seconds to enter calibration mode.



- Press the **WIND/+** and **PRESSURE**/- key to adjust values.
- Press the **SET** key to confirm & move to the next item.
- Press the **ALARM** key to reset any adjusted value.
- Press the **LIGHT /SNOOZE** key at any time to exit.

6.7.1 Calibration Order:

- 1) Indoor temperature offset calibrated (range $\pm 5^{\circ}\text{C}$, default: 0 degrees)
- 2) Indoor humidity offset calibrated (range $\pm 10\%$)
- 3) Outdoor temperature offset calibrated (range $\pm 5^{\circ}\text{C}$, default: 0 degrees)
- 4) Outdoor humidity offset calibrated (range $\pm 10\%$)
- 5) Absolute pressure offset calibrated (range $\pm 50\text{hpa}$)
- 6) Wind direction offset calibrated (adjust by degree)
- 7) Wind speed factor adjust, default 100% (range 50% to 150%)
- 8) Rain factor adjust, default 100% (range 50% to 150%)

6.8 Other Features

6.8.1 Factory Reset/Clear Memory

To restore the console to factory default, perform the following steps:

1. Remove the power from the console by removing the batteries and disconnecting the AC adapter.
2. Apply power by connecting the AC adapter.
3. Wait for all of the segments to appear on the screen,.
4. Press and hold the **WIND/+** and **PRESSURE/-** keys at the same time until the console power up sequence is complete (about 5 seconds).
5. Replace the batteries.

6.8.2 Register New Transmitter

Press and hold the **LIGHT /SNOOZE** button for 5 seconds, and the console will re-register the wireless sensor.

6.8.3 Backlight (constant backlight requires operation with AC adapter.)

1) With AC adaptor.

The backlight can only be continuously on when the AC adapter is permanently on. When the AC adapter is disconnected, the backlight can be temporarily turned on.

Press the **LIGHT SNOOZE** key to adjust the brightness between High, Low and Off.




2) Without AC adaptor

To reduce power consumption, the display console will automatically enter sleep mode and will not send data to the Internet if no key is pressed for 15s. Hold the **LIGHT /SNOOZE** key in sleep mode or plug in the DC adapter wake up equipment.

6.8.4 Tendency indicators


Tendency arrows allow you to quickly determine if temperature or pressure are rising and falling in a three hour update period, updated every 30 minutes.

- 3 hrs comparison which changes on every ½ hour

Tendency indicators		Humidity	Temperature	Pressure
	Rising	Rising > 3%	Rising >= 1C/2F	Rising > 1hpa
	Steady	Change <= 3%	Change < 1C/2F	Change <= 1hpa
	Falling	Falling > 3%	Falling >= 1C/2F	Falling > 1hpa


6.8.5 Wireless Signal Strength Indicator

The wireless signal strength displays reception quality. If no signal is lost, the signal strength indicator will display 5 bars. If the signal is lost once, four bars will be displayed.

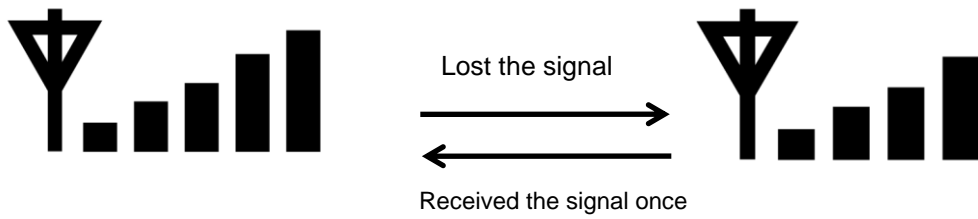


6.8.6 Weather forecast


There are six color forecast icons use changing atmospheric pressure to predict weathers conditions for the next 6-hours. Please allow at least one month for the weather station to learn the barometric pressure over time.

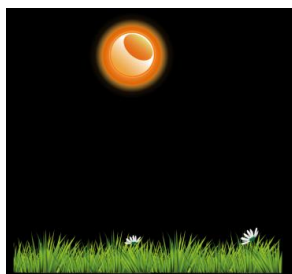


Sunny

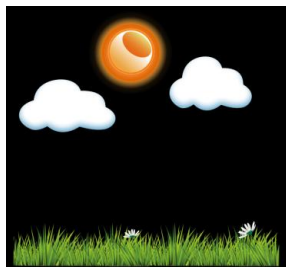


Partly sunny

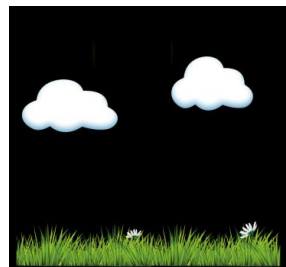




Cloudy

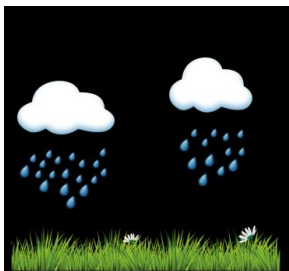


Rainy

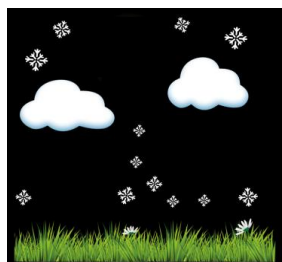

Snowy

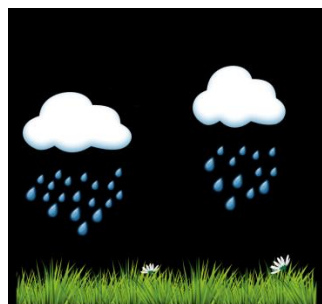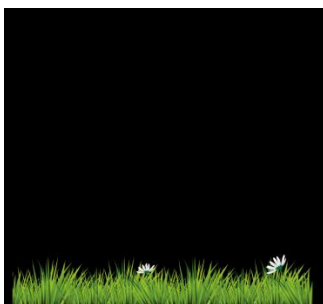

Storm rainy

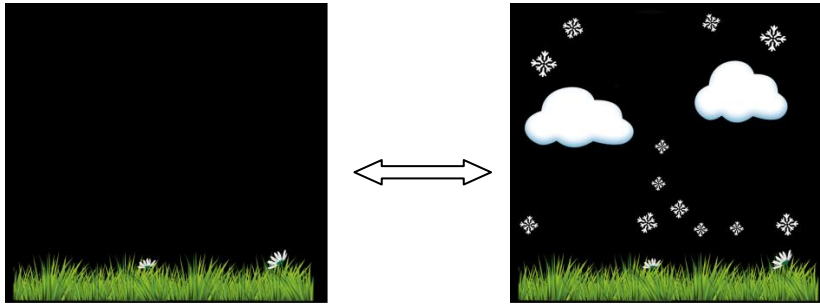

Storm Snowy

Note: Snowy icon will appear in place of rainy icon when the outdoor temperature is below 32 F (0°C).

Weather Forecasting Description and Limitations

In general, if the rate of change of pressure increases, the weather is generally improving (sunny to partly cloudy). If the rate of change of pressure decreases, the weather is generally degrading (cloudy, rainy or stormy). If the rate of change is relatively steady, it will read partly cloudy.

The reason the current conditions do not match the forecast icon is because the forecast is a prediction 24-48 hours in advance. In most locations, this prediction is only 70% accurate and it is a good idea to consult the National Weather Service for more accurate weather forecasts. In some locations, this prediction may be less or more accurate. However, it is still an interesting educational tool for learning why the weather changes.

The National Weather Service (and other weather services such as Accuweather and The Weather Channel) have many tools at their disposal to predict weather conditions, including weather radar, weather models, and detailed mapping of ground conditions.

6.8.7 Snooze

When time alarm has been triggered, the alarm will sound and alarm icon flash for 120s. Press **SNOOZE/LIGHT** key to silence the alarm for 10 minutes and then the alarm will sound again when that time is up. Press any key except SNOOZE/LIGHT key to stop the alarm.

7 Specification:

Outdoor data

Transmission distance in open field :	100m(330 feet)
Frequency :	433 MHz / 868 MHz (option)
Temperature range :	-40°C--60°C
Accuracy :	+ / - 1 °C
Resolution :	0.1°C
Measuring range rel. humidity :	10%~99%
Accuracy :	+/- 5%

Rain volume display : 0 – 6000mm (show --- if outside range)
 Accuracy : +/- 10%

Wind speed : 0-50m/s (0~100mph) (show --- if outside range)
 Accuracy: +/- 1m/s (wind speed< 5m/s)
 +/-10% (wind speed > 5m/s)

Light : 0-200k Lux
 Accuracy : +/-15%

Measuring interval outdoor sensor: 16 sec

Indoor data

Indoor temperature range : -10°C--60°C (14°F to + 140°F) (show --- if outside range)
 Resolution : 0.1°C

Measuring range rel. humidity : 10%~99%
 Resolution : 1%

Measuring range air pressure : 700-1100hPa (20.67-32.5inHg)
 Accuracy : +/-3hpa
 Resolution : 0.1hPa (0.01inHg)
 Alarm duration : 120 sec

Power consumption

Base station : 5V DC adaptor (included)
 Remote sensor : 3xAA rechargeable batteries (included)

8 Live Internet Publishing

This weather station sends data to three free hosting services:

Hosting Service	Website	Description
Weather Underground	WeatherUndeground.com	Weather Underground is a free weather hosting service that allows you to send and view your weather station data real-time, view graphs and gauges, import text data for more detailed analysis and

		use iPhone, iPad and Android applications available at Wunderground.com. Weather Underground is a subsidiary of The Weather Channel and IBM.
WeatherBug Community	backyard.weatherbug.com	WeatherBug Community is an extension of the WeatherBug community of weather stations. WeatherBug is a brand owned by Earth Networks that provides live weather data and maintains a mesoscale network of over 8,000 weather stations.
Weather Cloud	WeatherCloud.net	Weathercloud is a real-time weather social network formed by observers from around the world.


This weather station sends data to the Internet using your WiFi connection.


8.1 Connecting the Weather Station Console to WiFi

The WiFi feature only works when plugged into AC power due to higher energy requirements.



To connect the weather station to WiFi, you must first download the application from one of the following choices:

- Apple App Store
- Google Play Store

1. From your mobile device, visit the Apple App Store or Google Play Store and search for the “**WS Tool**” application. Download this application to your mobile device.
2. Run the WS Tool application, and select **Add Device**, as shown in  below figure

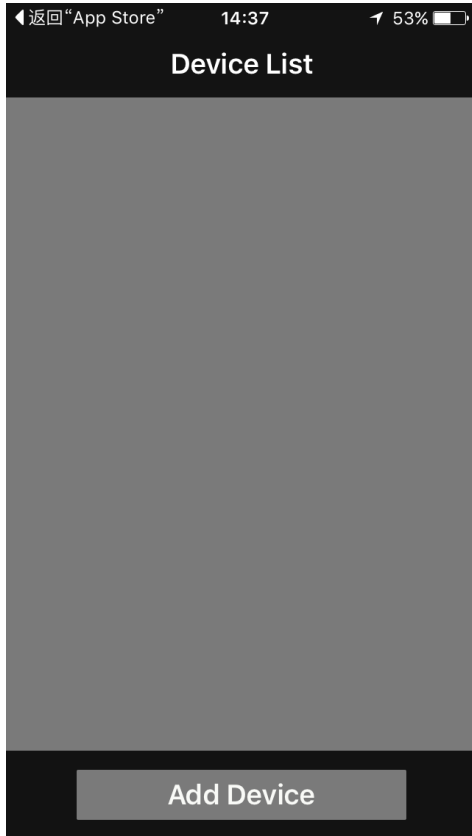

3. Make sure your mobile device is connected to your WiFi network. Enter the password for your router, and select Save, as shown in below figure.

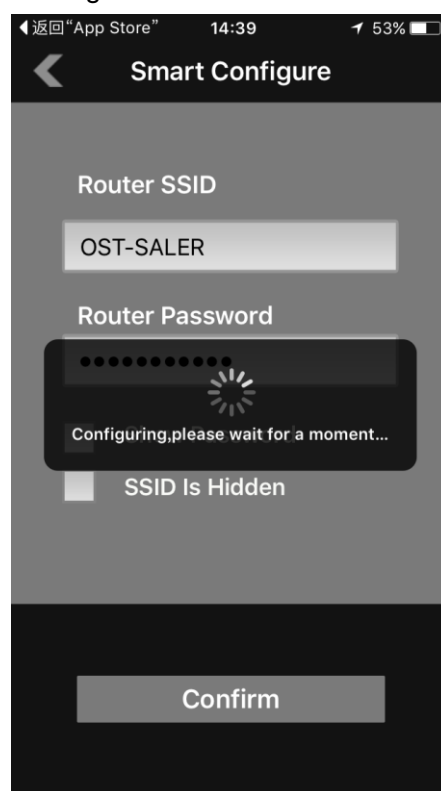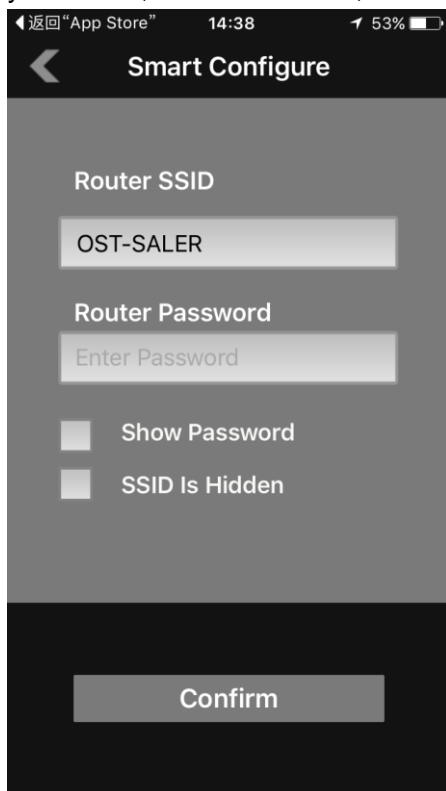


- If the WiFi icon is not flashing rapidly, (1) press and hold the RAIN and ALARM buttons at the same time for four seconds. (2) The WiFi icon will begin flashing rapidly, indicating the console is searching for your WiFi network.




Wi-Fi icon:

- Not connected routers, don't show;
 - No network connection router, slow flash;
 - Connect the router with network, long bright;
 - Smart configure mode, fast flash.
- Once the console has connected to your WiFi network, the devices Mac address and IP address will be displayed, as shown in below figure.

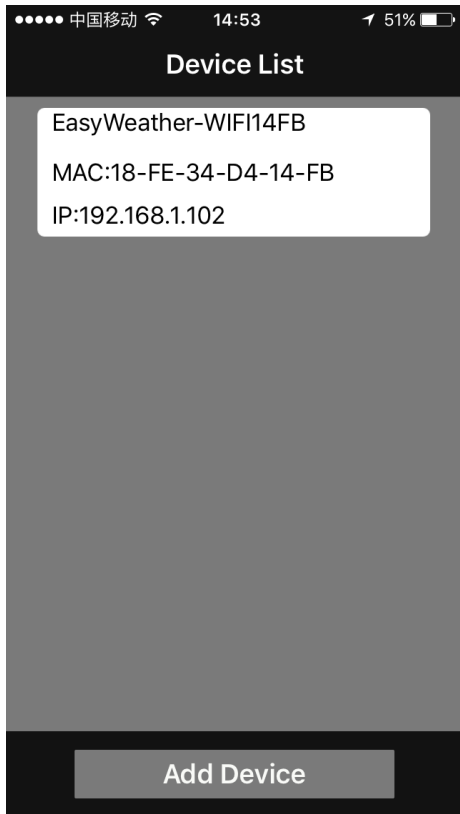

6. Enter your Wunderground.com and WeatherCloud.net Station ID, Password and StationNum (see Section 0).

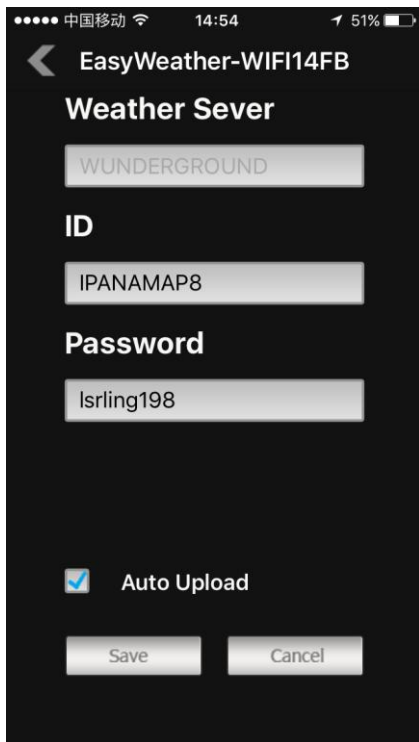


Now your weather station is connected for weather server. Download WU app to check your weather station records.


9. Registering with WeatherUnderground.com, WeatherBug.com and WeatherCloud.net

9.1 WeatherUnderground.com


Visit Wunderground.com and select the **Join** link at the top of the page. Select the **Free** sign up option.

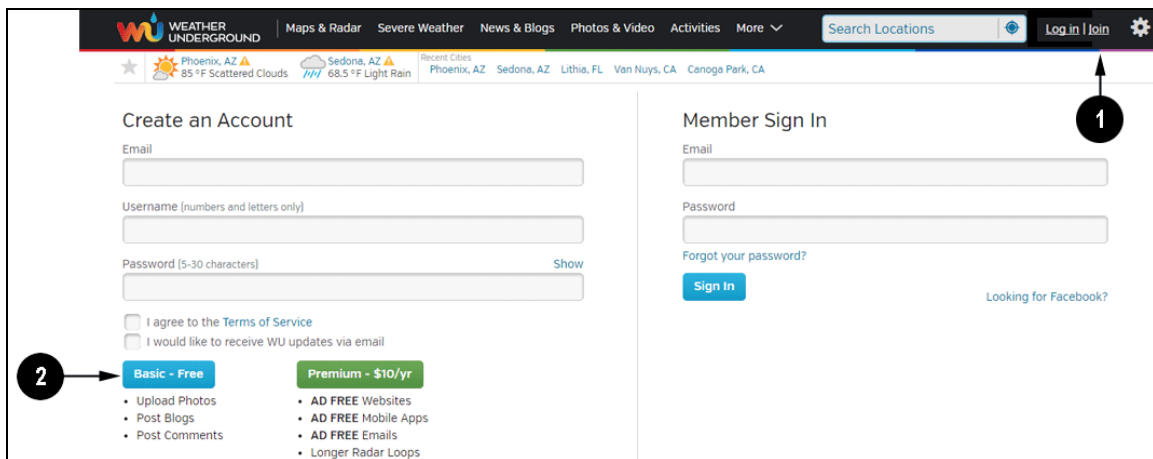

1. Select **More | Register Your PWS.**
2. Click **Send Validation Email.** Respond to the validation email from Wunderground (it may take a few minutes).

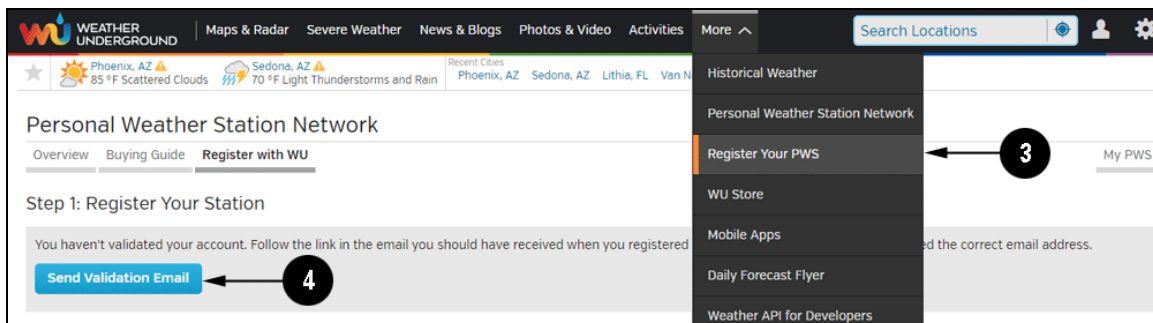

3. Select **More | Register Your PWS** again and enter all of the information requested.

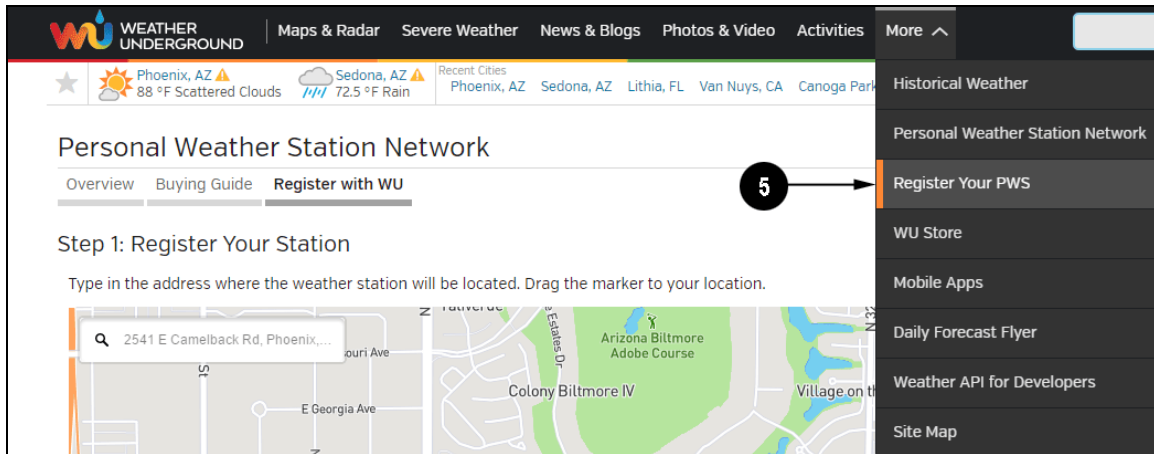


4. After registering your station, make a note of the following:

- Station ID
- Station Key / Password

Enter the Station ID (ID), Station Key (Password) and Station Number (StationNum) into the WS Tool.

Below figure is an example, and your station ID and password will be different.

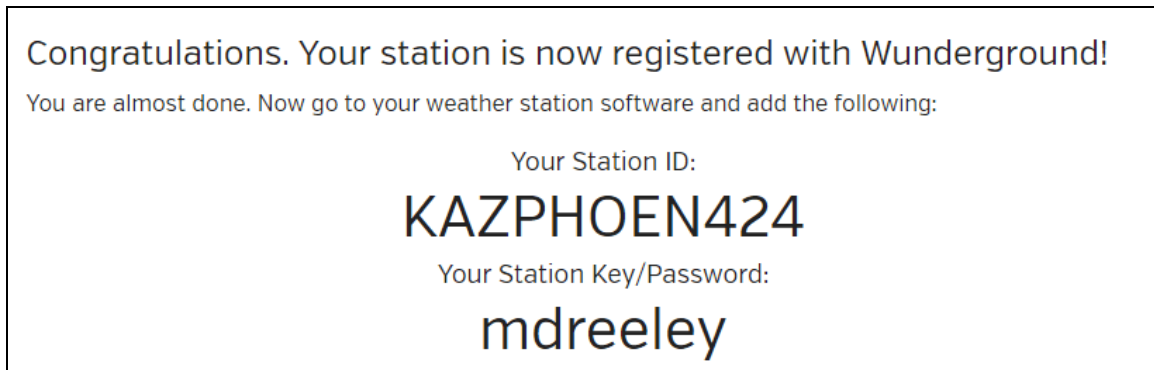

Note: Your station ID will have the form: KSSCCCC###, where K is for USA station (I for international), SS is your state, CCCC is your city and ### is the station number in that city.

In the example above, KAZPHOEN424 is in the USA (K), State of Arizona (AZ), City of Phoenix (PHOEN) and #424.

Viewing your Data on Wunderground.com

There are several ways to view your data on Wunderground:

Web Browser

Visit:

<http://www.wunderground.com/personal-weather-station/dashboard?ID=STATIONID>

where **STATIONID** is your personal station ID (example, KAZSEDON12).

La Barranca KAZSEDON12 (About this PWS)
Forecast for Sedona, AZ > 34.784 -111.742 > 4236 ft

PWS Data | PWS Widgets | WunderStation | PWS Blog | My PWS

Status:
PWS viewed 1557 times since March 1, 2015

Radar | Webcam | Compare

Current Conditions Station reported 16 seconds ago

51.6 °F
Feels Like **51.6 °F**

Wind from **North**
Gusts **0.0** mph

Dew Point: **25 °F** | UV: **2**
Humidity: **35%** | Solar: **85 w/m²**
Precip Rate: **0 in/hr** | Soil Moisture: **--**
Precip Accum: **in** | Soil Temp: **--**
Pressure: **30.03 in** | Leaf Wetness: **--**

6:47 AM | 6:28 PM
Waning Gibbous | 93% Illuminated

Weather History for Sedona, AZ [KAZSEDON12]

Previous | Daily Mode | March | 8 | 2015 | View | Next

Summary
Mar 8, 2015

	High	Low	Average		High	Low	Average
Temperature	52.2 °F	37 °F	44.6 °F	Wind Speed	0.9 mph	--	0 mph
Dew Point	25.9 °F	11.3 °F	17.8 °F	Wind Gust	2.5 mph	--	--
Humidity	40%	33%	37%	Wind Direction	--	--	ENE
Precipitation	0 in	--	--	Pressure	30.04 in	29.99 in	--

WunderStation iPad App

Visit:

<http://www.WunderStation.com>

to download the WunderStation iPad app.



Mobile Apps

Visit:

<http://www.wunderground.com/download/index.asp>

for a complete list of Mobile apps for iOS and Android. Alternately, you can find your data on your mobile device's web browser.



9.3 WeatherBug.com

Visit <http://pws.ensb.us/> and [Click here](#) to register your station.



WeatherBug Backyard

REGISTRATION

Please enter your personal information: (** Required Fields) [Log In](#)

**First Name: **Last Name:

**Country:

**Address: Apt./Unit Number:

**City: ** State or Province: **ZIP/Postal Code:

**Email Address: **Confirm Email Address:

**Telephone Number: - -

Create a personal Login and Password
 (This login information will allow you to access exclusive features and change your registration information at any time)

**Login Name:

**Password: (minimum 5 characters) **Confirm Password:

Please enter your Personal Weather Station information:

**Create a name for your Personal Weather Station: (example: Bob's Station)

Location of your Personal Weather Station

**Latitude Deg Min Sec North South [Find Location on Map](#)

**Longitude Deg Min Sec East West

**Elevation

Personal Weather Type: Internet Connection:

Note: Once Form is submitted, any changes can be made by re-opening the Registration Form, making updates and re-submitting the form. You can also contact WeathBug by clicking the Help button on the top of the main screen or by visiting www.weatherbug.com and clicking the SUPPORT link

After registering your station, make a note of the following:

- UserName
- Password
- Your Publisher ID
- Your Station Number


Enter the Publisher ID (ID), Password and Station Number (StationNum) into the Ambient Tool.

9.4 WeatherCloud

1. Visit WeatherCloud.net and enter a Username, Email and Password.



2. Respond to the validation email from WeatherCloud (it may take a few minutes).

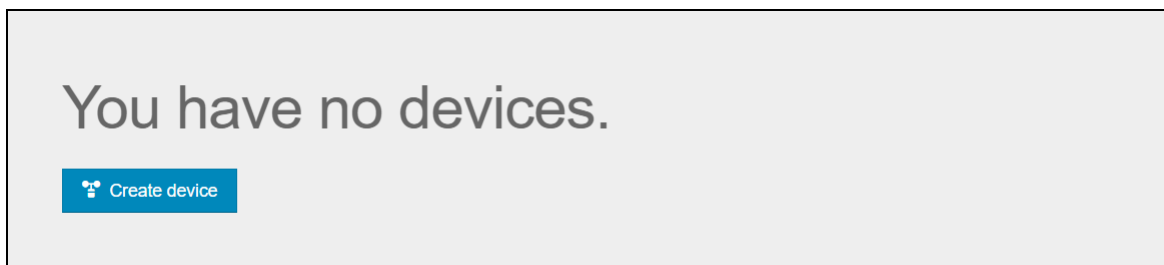

3. Select **Create Device** and enter your weather station information. After registering your station, make a note of the following:

- Weathercloud ID
- Key

Enter the Weathercloud ID (ID), Key (password) into the Ambient Tool. Leave the Station Number (StationNum) blank.